



## **Flo-Tite Cryo Series** **Installation, Operation and Maintenance Manual**

Note: Before using a valve, read the entire IOM carefully and make sure you have a clear understanding of all information included.

This manual describes the procedures for the safe and efficient installation, operation, and maintenance of Flo-Tite Cryo Series Ball Valves. **Failure to follow the procedures in this manual may result in Flo-Tite warranties being voided.** Problems with the operation and maintenance of these valves should be directed to the nearest Flo-Tite Representative.

### **INSTRUCTION:**

1. Dissembled the valve as per the instruction shown in the relevant IOMs.
2. Remove the stem from the body.
3. Make sure to put Teflon gasket and replace stem packing with Teflon bushing in placed on bonnet.
4. Put the Cryo Stem on bonnet of the valve and tighten it up.
5. Assembled the valve as per the instruction shown in the relevant IOMs.

***Note: If this application required vented ball, please refer to relevant IOMs of particular model.***